



INSTALLATION INSTRUCTIONS

INTERNAL METAL CLAD SEAL PULLER for 440-T4 & 4T60E

T350-302

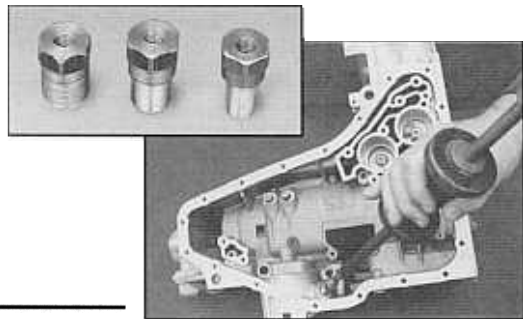

 1-2 Servo Pipe
Seal Puller



Broken Filter
Neck Puller



Filter Seal
Puller

1. Seal Pullers #1, #2 or #3 are designed to be screwed into the appropriate seal with a wrench (**Figures 1 & 2**).

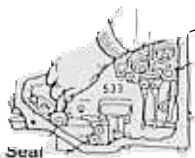


Figure 1

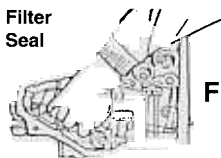


Figure 2

2. Once the puller is tight, screw a 3/8" slide hammer into the seal puller (**Figure 3**). Move the hammer weight until the seal comes out of the case.

3. Reinstall the new seal with the appropriate driver.

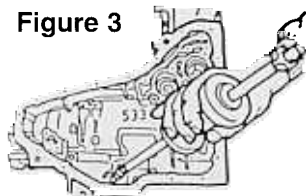


Figure 3