 
## INSTRUCTIONS FOR

## SERVO CAPSULE DRIVER

for 700-R4, 4L60, 4L60E

T700-308





To install the Check Ball Capsule to the perfect depth, tap it until the land meets the case. Eliminates 2/3 flair-up.