

INSTALLATION INSTRUCTIONS

AXLE STABILIZER BEARING & SEAL Both Sides

Fits Ford Escort '81-up, Topaz & Tempo '85-up,
Taurus & Sable '86-up and Lincoln Continental '89-up.

86125LRB 16522 Replacement Seal



CAUTION:

When removing half shaft, slide in 3/4" - 5/8" heater hose so final drive gears do not fall down in case. Remove heater hose before installing half shaft.

1. Remove the axle.
2. Remove the seal (**Figure 1**).
3. Clean the area where the seal was removed.
Use Lock-Tite™ sealant when installing (**Figure 2**).
4. Before reinstalling the axle, sand the seal surface on the inner C.V. joint (**Figure 3**), and apply a generous amount of assembly lube or axle grease (**Figure 4**).

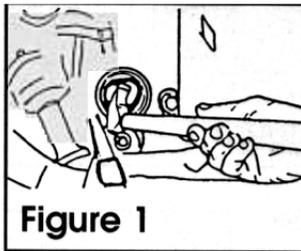


Figure 1

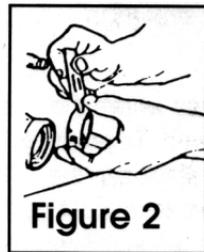


Figure 2

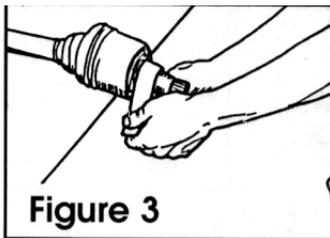


Figure 3

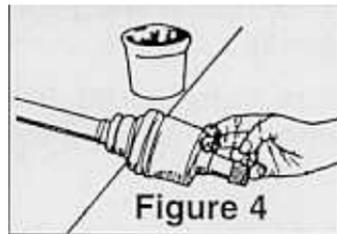


Figure 4

Teckpak Hotline, 1-800-527-2544 / www.teckpak-fitzall.com