

INSTRUCTIONS FOR
CASE BUSHING DRIVER
for **250, 250C, 350, 350C,**
700-R4, 4L60, 4L60E

T700-310

Using a standard bushing driver handle and, if necessary, an extension, drive in the bushing until the Case Bushing Driver bottoms out. The Bushing Driver is designed to provide the proper depth.

