

INSTALLATION INSTRUCTIONS

SERVO EXTENDO PINS

for 200, 440-T4, 700-R4,

AXODE LOW & INTERMEDIATE, A4LD REVERSE ONLY

56605E: A4LD Reverse Only

65786E: 200, 200C, 200-4R, 325, 325-4L

77605E: 700-R4

77605G: 4L60E

84572E: 440-T4 (Fits 1-2 & Reverse)

96946E: AXODE Low & Intermediate



1. Determine the amount needed to be added to your pin application by whatever means you normally use.

Extendo-Pin length extends pin length as follows:

440-T4	.300"
700-R4	.150"
4L60E	.289"
200	.125"
A4LD (Reverse Only)	.190"
AXODE (Low & Int.)	.200"

2. Place the Extendo-Pin on the band-apply end of the servo pin. Use a hammer to strike the tip of the Extendo-Pin and drive the tip until it bottoms (two or three strong hits) (**Figure 1**).

Now the pin can be ground to the desired length (**Figure 2**).

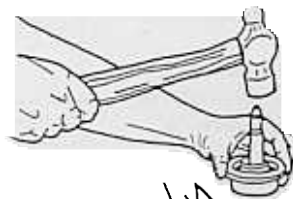


Figure 1

Figure 2



NOTE: Blow or wash excess grinding debris from servo.