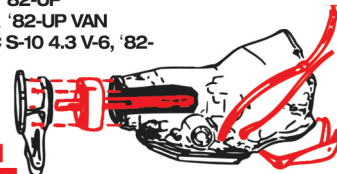



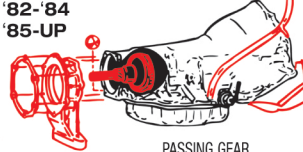
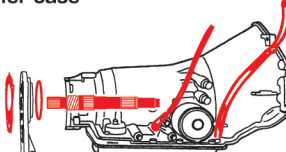
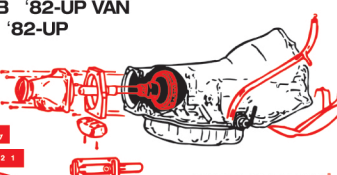
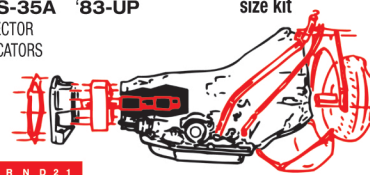
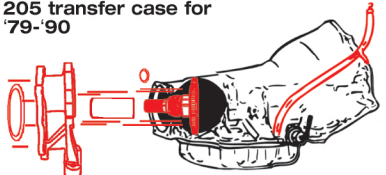
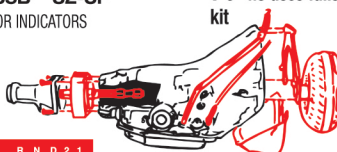


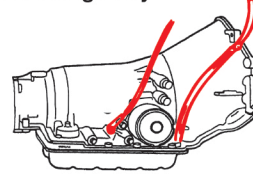
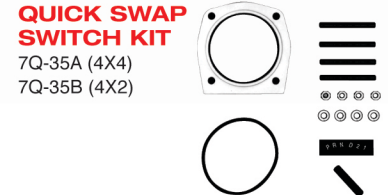


# Performance

<p><b>4x4 700-R4 to 350</b> V-8 and V-6 4.3 NO SPEEDOMETER CHANGE NECESSARY #7-35A '82-UP #V7-35A '82-UP VAN #7S-35C S-10 4.3 V-6, '82-UP</p>  <p>SELECTOR INDICATORS P RND21 P RND21</p>	<p><b>4x2 700-R4 to 350</b> V-8 and V-6 4.3 NO SPEEDOMETER CHANGE NECESSARY #V7-35B '82-UP VAN #7-35B '82-UP</p>  <p>SELECTOR INDICATORS P RND21 P RND21 P RND21 P RND21</p>	<p><b>200C to 350</b> V-8 #2-35B '82-'83 ONLY</p>  <p>SPEEDO-GEARS &amp; CLIP</p>
<p><b>200-4R to 350</b> V-8 #2R-35A '81-UP</p>  <p>SELECTOR INDICATORS P RND21 P RND21</p> <p>SPEEDO-GEARS &amp; CLIPS</p>	<p><b>4x4 700-R4 to 400</b> V-8 NO SPEEDOMETER CHANGE NECESSARY #7-40A '82-'84 #7-40C '85-UP</p>  <p>SELECTOR INDICATORS P RND21 P RND21</p> <p>PASSING GEAR SWITCH</p>	<p><b>4x4 350 to 700-R4</b> 203 Transfer case #3-70A</p> 
<p><b>4x2 700-R4 to 400</b> V-8 and V-6 4.3 NO SPEEDOMETER CHANGE NECESSARY #V7-40B '82-UP VAN #7-40B '82-UP</p>  <p>SELECTOR INDICATORS P RND21 P RND21</p> <p>PASSING GEAR SWITCH</p>	<p><b>4x4 700-R4 to 350</b> V-6 2.8 only V-6 4.3 uses full size kit NO SPEEDOMETER CHANGE NECESSARY #7S-35A '83-UP SELECTOR INDICATORS</p>  <p>P RND21</p> <p>USE 350 BPO TRANSMISSION FLUID BALANCED CONVERTER</p>	<p><b>3-40C</b> 4x4 350 to 400 205 transfer case for '79-'90</p> 
<p><b>4x2 700-R4 to 350</b> V-6 2.8 only V-6 4.3 uses fullsize kit SELECTOR INDICATORS</p>  <p>P RND21 P RND21</p> <p>USE 350 BPO TRANSMISSION FLUID BALANCED CONVERTER</p>	<p><b>4x2 200C to 350</b> V-6 2.8 only NO SPEEDOMETER CHANGE NECESSARY #2S-35B '82-UP</p>  <p>USE 350 BPO TRANSMISSION SPEEDO GEARS FLUID BALANCED CONVERTER</p>	<p><b>FOR KITS BELOW: Remove 700-R4, 200-4R, 200C and replace with easy to install 350 or 400.</b></p> <p><b>4x4 700-R4 to 350</b> V-8 and V-6 4.3 Part #7-35A, '82-Up #V7-35A, '82-Up Van Part #7S-35C, S-10 4.3 V-6, '82-Up</p> <p><b>4x2 700-R4 to 350</b> V-8 and V-6 4.3 Part #V7-35B, '82-Up Van #7-35B, '82-Up</p> <p><b>200C to 350</b> V-8 Part #2-35B, '82-'83 only</p> <p><b>200-4R to 350</b> V-8 Part #2R-35A, '81-Up</p> <p><b>4x4 700-R4 to 400</b> V8 Part #7-40A, '82-'84 #7-40C, '85-Up</p> <p><b>4x2 700-R4 to 400</b> Part #V7-40B, V-8 and V-6 4.3, '82-Up Van Part #7-40B, '82-Up</p> <p><b>4x4 700-R4 to 350</b> V-6 2.8 and only V-6 Part #7S-35A, '83-Up 4.3, Full size kit</p> <p><b>4x4 350 to 400</b> Part #3-40C, 205 transfer case for '79-'90.</p> <p><b>4x2 700-R4 to 350</b> V-6 2.8 only Part #7S-35B, '82-Up, V-6 4.3, Full size kit</p> <p><b>4x2 200C to 350</b> V-6 2.8 only Part #2S-35B, '82-'83</p> <p><b>For Kits Below: Remove 350 &amp; replace with easy to install 700-R4</b></p> <p><b>4x4 350 to 700-R4</b> V-8 and V-6 Part #3-70A, 203 transfer case</p> <p><b>4x2 350 to 700-R4</b> V-8 and V-6 Part #3-70B Electronic package only</p>
 <p><b>TRANS SWAP SWITCH KIT</b> S-350-2 (4X2) &amp; S-350-4 (4X4)</p>	<p><b>4x2 350 to 700-R4</b> V-8 and V-6 Electronic Package only #3-70B</p> 	
<p><b>QUICK SWAP SWITCH KIT</b> 7Q-35A (4X4) 7Q-35B (4X2)</p> 	<p><b>3-40AB</b> <b>4x4 350 &amp; 400</b> V-8 &amp; V-6, 203 transfer case adapter (4-wheel drive).</p> 