

Cable Connections

THE SOLUTIONS THAT ADJUST PERFECTLY!



(A) (B)

DETENT CABLES

Telescoping design fits 95% of all GM transmissions.

K35955U (A) - Does not fit firewall mount.
Fits 200 & 200C, '76 to '80, 250, 250C, 350, 350C '69 to '87.



K65940U (B) - Does not fit 325, 3254L.
Fits 125C, 200, 200C, 200-4R, 440-T4, 700-R4, 4L60.



K77978SP

New Longer Cable for Performance Applications

OEM-Style Detent Cables Original equipment style detent cables for GM cars and trucks.

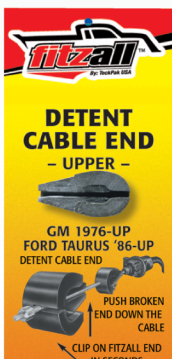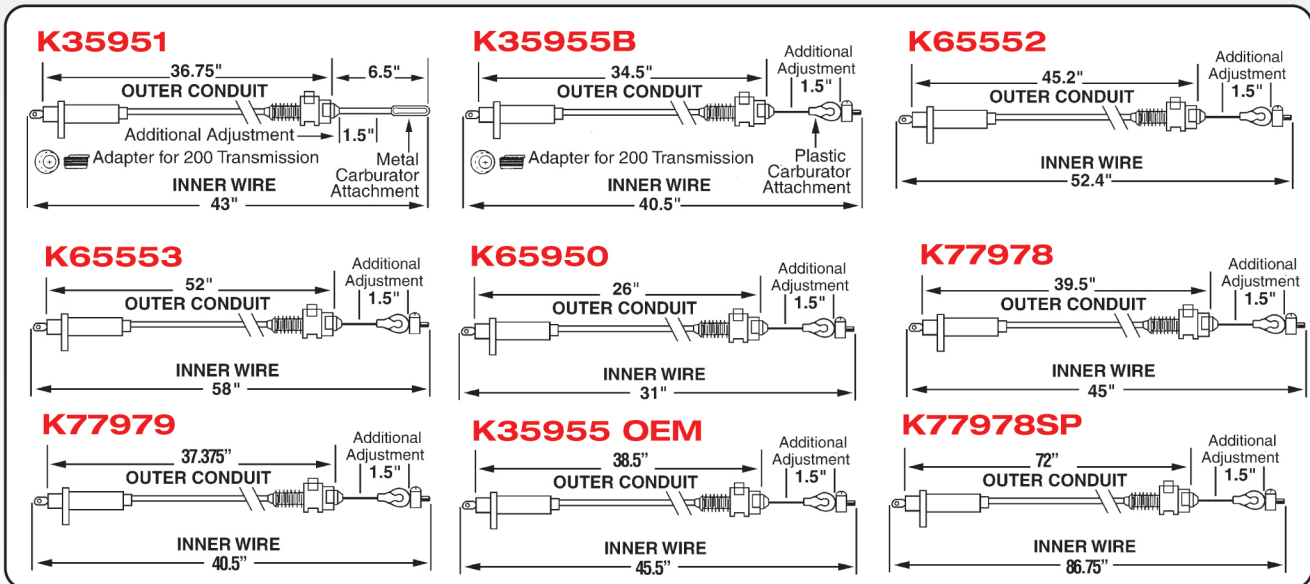

Cable End Upper **K35955CE** GM- '76-UP, Ford Taurus '86-UP, Clip on Fitzall cable end in seconds.

GM '89 to '94, BW, Z-F and Asian Warner '72-UP



Large GM Detent Cable Repair End K77909U
Lower '80-UP 700-R4, 125C, 200, 200C, 200-4R, 440-T4 325, 325-4L



Small GM Detent Cable Repair End K35909-1
Lower '69-'87 350 & some 200 cables



Cable End Lower 67999
BW, Asian Warner Volvo, Toyota, Jaguar, Z-F; '72-'97