

INSTALLATION INSTRUCTIONS

AXLE STABILIZER BEARING & SEAL PASSENGER SIDE

Fits All Chrysler FWD, both sides:

A604, A670, A404, A413, A470, A465, A525, A520, A555, '78-up

**Fits all Chrysler Manual Transmissions &
Automatic Transmissions, '78-up, both sides**



32125LRB 330749 Replacement Seal

PASSENGER'S SIDE:

1. Remove the extension housing seal from the passenger side of vehicle.

2. Due to the thin wall of the housing, we recommend the use of Lock-Tite sealant (Figure 1).

3. When installing the Teckpak Stabilizer, line up the lube hole with the return slot in the extension housing (Figure 2).

4. Install the stabilizer with Teckpak Bearing Driver T404-303. (Figure 3).

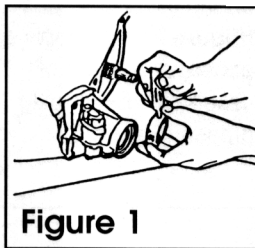


Figure 1

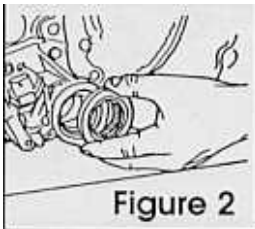


Figure 2

Allow 30 to 60 minutes for Lock-Tite™ sealant to dry.

5. Before reinstalling the axle, sand the seal surface on the inner C.V. joint (Figure 4), and apply a generous amount of assembly lube or axle grease (Figure 5).

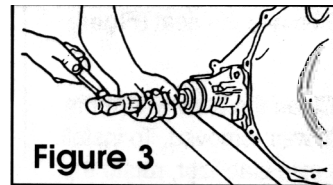


Figure 3

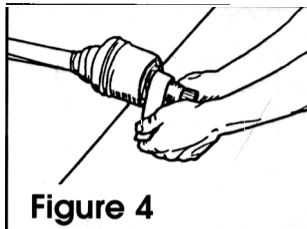


Figure 4

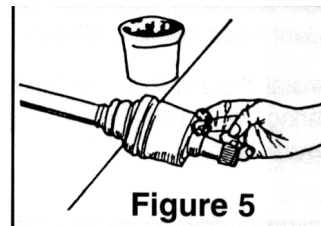


Figure 5