


INSTALLATION INSTRUCTIONS

SHIFT SOLENOID for AXODE/AX4S


96953U 15 to 25 ohms

1. To Remove:

Depress the spring tab and twisting the solenoid to the left until it clicks (**Figure 1**). Pull the old solenoid from the valve body.

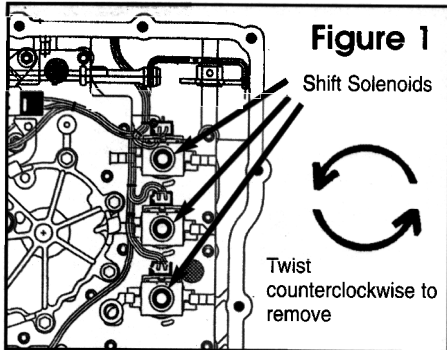

2. To Install: Insert the new Teckpak Shift Solenoid (**Figure 2**) into the valve body and secure by twisting to the right until it clicks. Connect wiring harness.

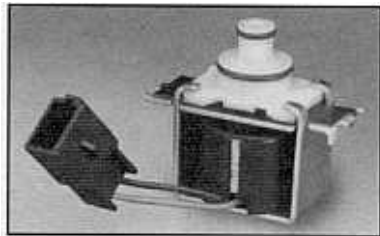

Twist clockwise to install

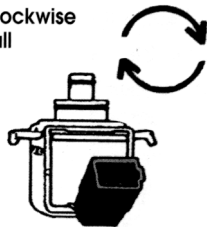


Figure 2