


EPC SOLENOID for AXODE/AX4S

96955 3.23 to 5.5 ohms

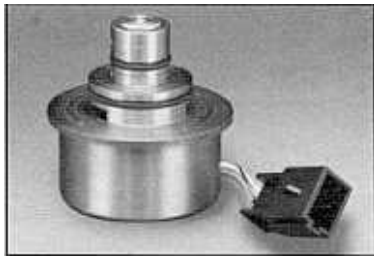

1. To remove the old EPC solenoid unplug the harness from the old solenoid. Next, remove the bolts holding the old solenoid to the valve body. Now pull the old solenoid directly out.

2. Remove mounting bracket from original solenoid by spreading slightly and pulling off top. Note: The EPC Solenoid shares a bolt with the Lock-up solenoid, and the Lock-up may have to be temporarily removed to remove the mounting bracket.

3. To Install: Slide mounting bracket over Teckpak EPC and insert the new Teckpak EPC Solenoid into the valve body.

Insert and tighten the retaining bolts.

4. Plug the OEM harness connector into the new Teckpak solenoid wire harness in the same manner as unplugged.

Line Pressure:

130-15-	Park (closed throttle)
61-99:	Reverse (closed throttle)
48-77:	Drive (closed throttle)
252-316:	Reverse (open throttle)
168-217:	Drive (open throttle)